
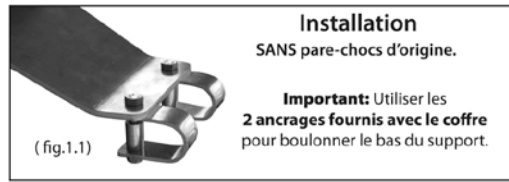



Étape #1

Installer le support en acier au porte-bagages du V.T.T.
Utiliser les 2 boulons du porte-bagages pour fixer le haut du support.

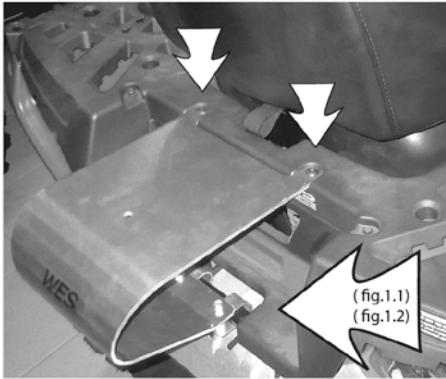


Étape #2

Percer un trou 5/16" aux 2 endroits indiqués.

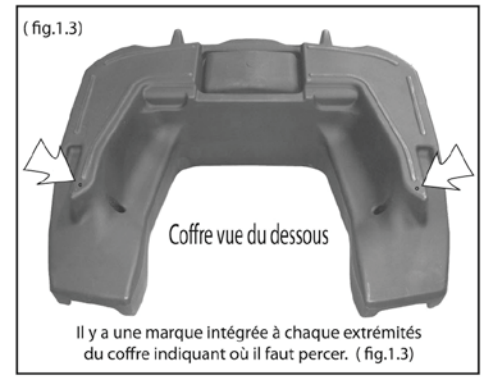

Étape #3


Fixer la partie avant du coffre au VTT

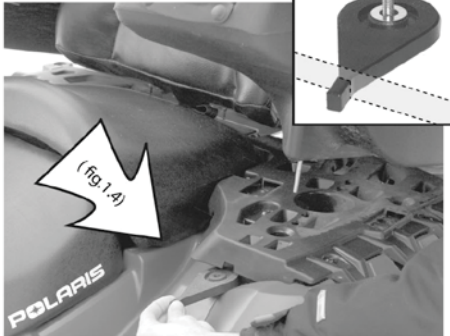

Insérer un ancrage de chaque côté sous le porte bagages (fig.1.4) mais ne pas serrer complètement les boulons.

Étape #4

Fixer la partie arrière du coffre au VTT

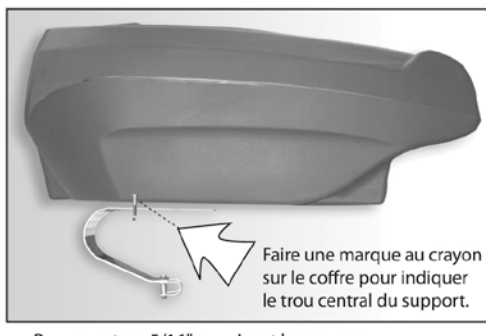

Percer un trou 5/16" en suivant la marque

Conseil: Soulever légèrement le coffre pour en faciliter le perçage.



Terminer l'installation en serrant complètement le boulon arrière ainsi que les 2 boulons avant.

COUVERCLE D'ACCÈS:

Les clés pour la serrure sont à l'intérieur du coffre lors de la livraison.
Ce coffre résiste aux éléments externes mais n'est pas complètement étanche.

NETTOYAGE:

Retirer la cargaison et laver à l'eau avec savon doux. Pour rehausser le fini, vous pouvez utiliser un protecteur à plastique et caoutchouc à base de silicone retrouvé communément sur le marché (ne pas enduire les coussins car ils deviennent trop glissants).
Lubrifier les serrures à intervalle régulier pour protéger de l'eau, de la rouille ou du gel.

AVERTISSEMENTS :

Ne pas transporter de matières inflammables ou explosives à l'intérieur du compartiment.
Toutes connexions doivent être faites par un professionnel.

Fils de connexion et spécifications

Vert	Direct
Jaune	Lumière de frein
Blanc	Mise à terre

modèle De Luxe


Poignées chauffantes	18 watts (par poignée)
Poignées et siège chauffants	36 watts
Fusible	5 ampères

Modes d'intensité

Poignées chauffantes	Vers le haut pour haute intensité / Au centre pour position fermée / En bas pour basse intensité
Siège chauffant	Interrupteur On/ Off

Step #1

Install the steel support on the ATV's rack.
Use the two bolts of the rack to attach the top of the bracket.

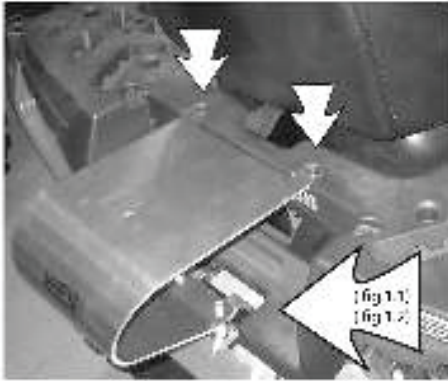


Step #2

Drill a 5/16" hole on the 2 locations shown below



Step #3

Attach the front of the cargo box to the ATV

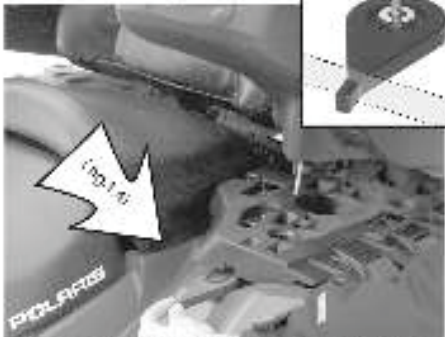

Slide an anchor under the rack on each side and place the cargo seat on the rack. (fig. 1.4) Screw on the bolts but do not tighten completely for now.

Step #4

Attach the back of the cargo box on the ATV



Drill a 5/16" hole on the pencil mark.
Tip: Lift the cargo box a little to make drilling easier.



Complete the installation by tightening the bolt and the 2 front bolts.

ACCESS LID:

The keys for the lock are located inside the cargo box.
This cargo box is weather resistant but not waterproof.

MAINTENANCE:

Remove box and wash with water and mild soap. For a brighter finish, you can use a common silicone based protector for plastic and rubber. Do not apply on seat cushion as it will be too slippery.
Lubricate the locks on a regular basis. This will help protect it from rust and frost.

WARNING:

Do not carry any flammable, explosive material or liquids inside the cargo box.
All wire connections should be done by a trained professional.

Wire connections and specifications

Green	Direct
Yellow	Rear light
White	Ground

De Luxe model

Heated grips	18 watts (per grip)
Heated grips and cushion seat	36 watts
Fuse	5 amps

Intensity modes

Heated grips	Upward for high intensity / Center for OFF mode / Downward for low intensity
Heated cushion seat	On/ Off switch