

Important:


- 1- Les 2 coffres sont identiques. Avant d'entreprendre l'**étape 1**, vous devez identifier un pour le côté gauche et un pour le côté droit.
- 2- Chaque coffre contient un ensemble d'attaches rapides «Lock n' Go» (3 par ensemble).
- 3- S'installe exclusivement sur Polaris Sportsman Touring 850 (2009+) / 550 (2010+) / 570 XP (2014+) / 1000 XP (2015+)
- 4- Vous devez retirer les poignées d'origines avant l'installation.

- Les côté sont déterminés par la position du chauffeur




Étape 1: En dessous de chaque coffre percez 3 trous aux 3 endroits indiqués


570 XP (2014+)

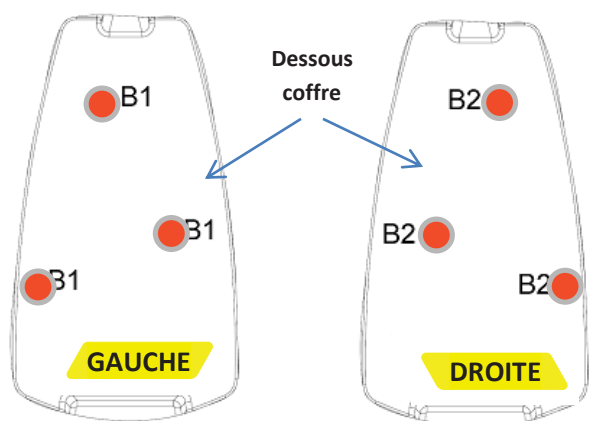


850 (2009 à 2014) / 550 (2010 à 2014) / 1000XP (2015+)

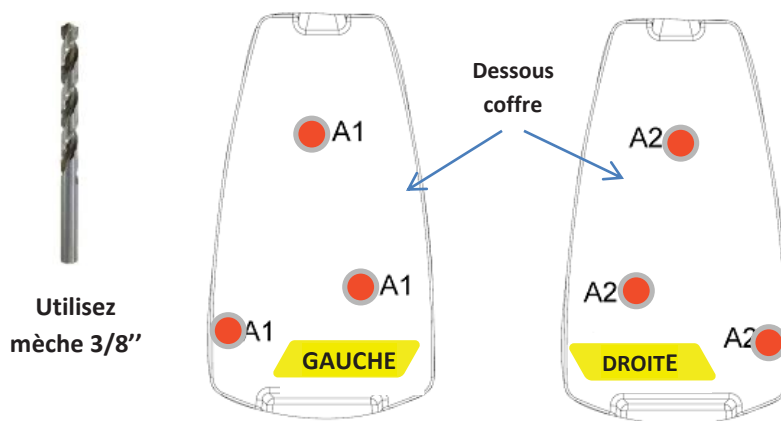

Étape 2: Dans chacun des coffres, installez 3 attaches rapides dans les trous définis à l'étape 1.

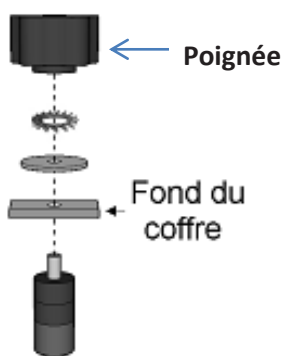

Étape 3: Placez le coffre gauche sur la section gauche du porte-bagage en insérant les attaches rapides dans les trous du porte-bagage. Ensuite **serrez fermement chaque poignée**. Même procédure pour le coffre droit.

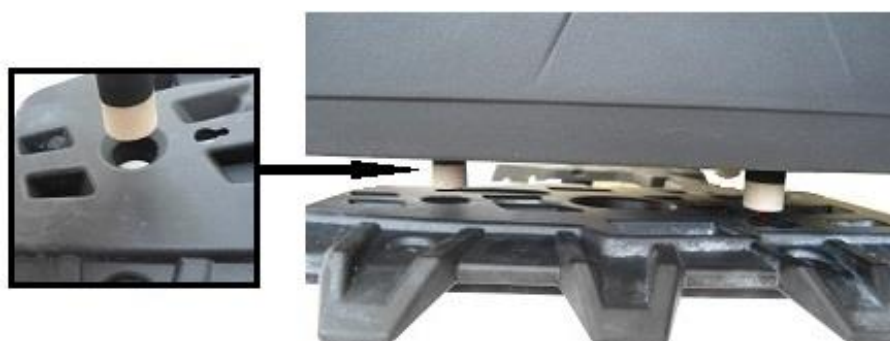

***Assurez-vous que les coffres sont bien fixés au porte-bagage avant chaque utilisation**

Avertissement: Ne pas transporter de matières inflammables ou explosives à l'intérieur des coffres.

Maintenance : Nettoyez avec un savon doux seulement.

Garantie: Un an à partir de la date de facturation ou à partir de la date de fabrication (celui qui vient en premier).


Before you start:

- 1- Both boxes are completely identical.
- 2- Choose one box that will go on the left side and one on the right side.
- 3- Each box c/w a Wes Quick Release «Lock n' Go» kit (3 per kit)
- 4- This box set fits only on: Polaris Sportsman Touring 850 (2009+) / 550 (2010+) / 570 XP (2014+) / 1000 XP (2015+)
- 5- Remove the handles from your unit prior to installation

- The left and right side are determined by the position the rider is sitting on the ATV.




Step 1: Underneath each box drill 3 holes at the 3 indicated spots:

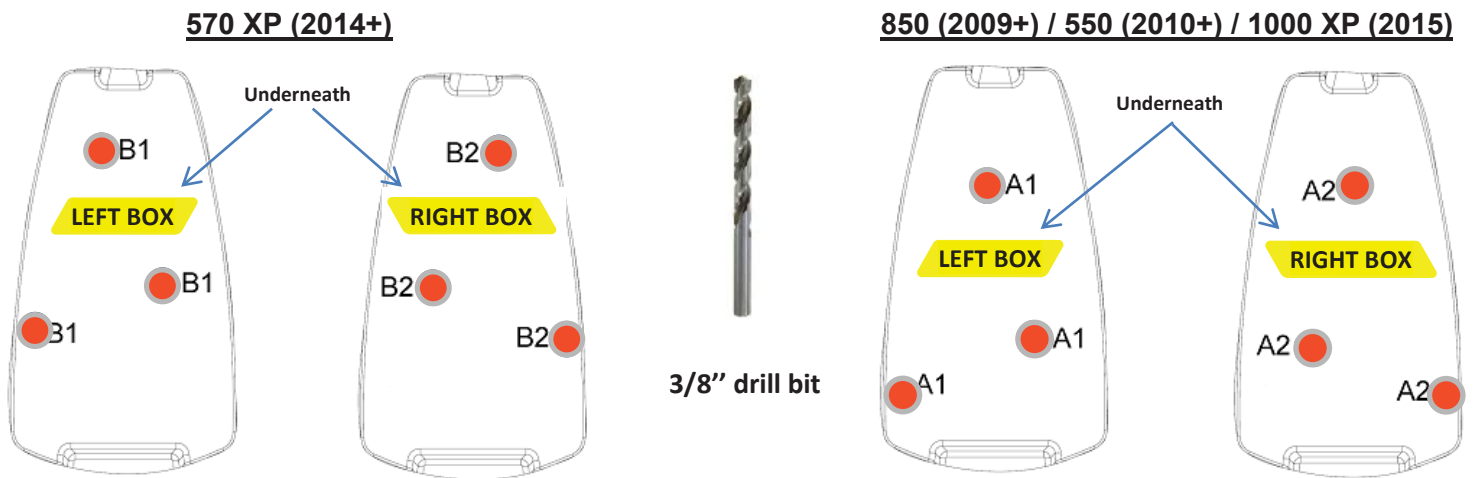

Step 2: For each box, insert 3 Quick Releases in the holes made at Step 1.

Step 3: Place the left box on the left side of the rear rack and insert all 3 Quick Releases in each hole. Tighten each knob securely. * Same procedure for right box

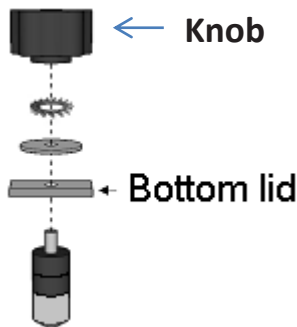

*** Make sure both boxes are securely fastened before each ride.**

Warning: Do not carry any flammable or explosive material / liquid.

Maintenance: Clean with mild soap and water only.

Warranty: One year from date of purchase or from date of manufacturing (whichever comes first)