

Notes importantes

1. Le centre de gravité du chargement doit être devant ou aligné avec l'essieu arrière du quad.
2. Positionnez le coffre selon le chargement.
3. L'ensemble de fixation en «U» (inclus avec chaque coffre) est conçu pour fonctionner sur la majorité des porte-bagages en tube.
4. L'ensemble de fixation en «U» ne s'applique pas aux porte-bagages en plastique. Attaches rapides disponibles pour certains porte-bagages en plastique. Veuillez consulter le www.wesindustries.com à la section Accessoires pour plus d'informations.
5. Bien vouloir vos référer au www.wesindustries.com à la page du modèle de votre coffre, pour visionner le schéma de branchement.
6. Pour toutes connexions au véhicule, veuillez vous référer à un mécanicien certifié.



Étape 1.

Placer le coffre sur le porte-bagage afin d'identifier la meilleure localisation possible pour installer les boulons en «U».

Note

Les boulons en «U» doivent être placés aussi éloignés que possibles les uns des autres à un minimum 1" (2.54cm) du pourtour du coffre (disposition en 4 quatre coins). Il est recommandé de les appuyer sur les intersections des tubes ou sur les barres de renfort du porte-bagage.




Étape 3.

Retirez le coffre du porte-bagage et avec un foret (mèche) 5/16", percez les trous aux endroits définis à l'étape 2.

Note


Avant de percer assurez-vous que les espacements des trous pour les boulons en «U» sont bien respectés.

DISTANCE MINIMUM
1" (2.54 cm)

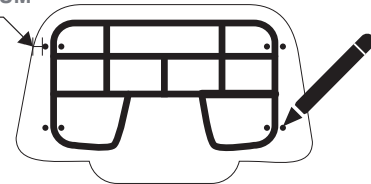

Étape 2.

Faire des marques en dessous du coffre indiquant les endroits où il faut percer.

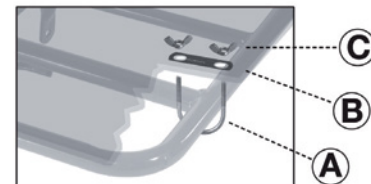

Étape 4.

Placer le coffre sur le porte-bagage et installer les boulons en «U» (A) en les insérant par en dessous du coffre et du porte-bagage. Ensuite placer une plaque d'appuis (B) sur chacun des boulons en «U» à l'intérieur du coffre. Fixez chaque écrou papillon (C) sur les boulons en «U».

Note

Les plaques d'appuis ne doivent pas plier par un serrage excessif.

Fils de connexion

VERT	Direct
JAUNE / BRUN	Lumière à frein arrière
BLANC	Mise à terre (Ground)

Nettoyage

Utilisez de l'eau avec un savon doux (sans abrasifs) et nettoyez selon le besoin. Afin de rehausser le fini du plastique, appliquez un protecteur à base de silicone selon le besoin.

Avertissement

Ce produit n'est pas endossé ni approuvé par les autorités pour transporter un ou des passagers. Ne pas transporter de matières inflammables ou explosives à l'intérieur du coffre.

Garantie

Un an à partir de la date d'achat ou un an à partir de la date de fabrication (celui qui vient en premier). Wes Industries Inc s'engage à remplacer toutes pièces défectueuses suite à un défaut de fabrication seulement. Aucun frais de main-d'œuvre ne sera remboursé.

MODELS

Touring Standard | Touring de Luxe
122-0020 122-0025

Before you start

1. The payload's center of gravity must be in front or in line with the ATV's rear axle.
2. Position the cargo box according to the workload.
3. A «U» bolt mounting kit is included in every cargo box. This mounting kit is specially designed to fit on all tubing racking.
4. The «U» bolt mounting kit is not designed to fit on plastic racks. Mounting kits for certain plastic racks are available. Please log on to www.wesindustries.com for more information.
5. To view the wiring diagram, please refer to www.wesindustries.com and click on the Wes Touring page. You will find a PDF file named «wire diagram».
6. For wire connections, please refer to a certified technician.




Step 1.

Place the cargo box on the rack to identify the best location to install the «U» bolts.

Note

The «U» bolts must be placed as far away as possible from one another (in a 4 corner fashion) and at a minimum 1" (2.54cm) from the box's outer edge. We recommend installing the bolts against tubing intersections to prevent any sliding.

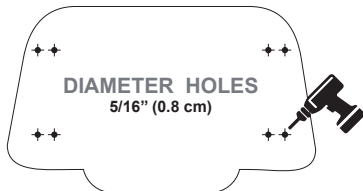


Step 3.

Remove the cargo box from the rack and drill the holes (defined at step 2) with a 5/16" (0.8cm) drill bit.

Note


Before any drilling, make sure all the distances between the holes are correct.

MINIMUM DISTANCE
1" (2.54 cm)

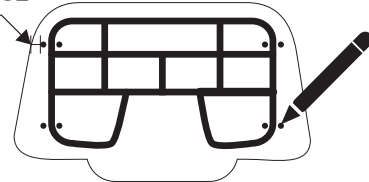

Step 2.

Underneath the cargo box, mark down the spots where you need to drill the holes.

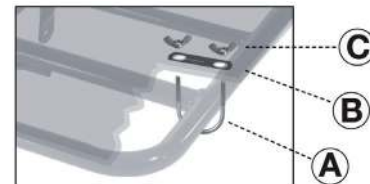

Step 4.

Place the cargo box on the rack and install all the «U» bolts (A) by inserting them underneath the cargo box and the rack. Then place the metal plates (B) on each «U» bolt from the inside the cargo box. Then screw on the wing nuts (C) on each bolt.

Note

Do not over tighten. The metal plates must not be bent.

Wire Connections

GREEN	Direct
YELLOW / BROWN	Brake light
WHITE	Ground

Maintenance

Clean with mild soap and water only. For a brighter finish, use a silicon based protector.

Warning

This device is not endorsed or approved by any authorities for carrying any passenger(s). Do not carry any flammable materials or liquids inside the cargo box or the cargo box seat. Do not carry any explosive materials or liquids inside the cargo box or the cargo box seat.

Warranty

One year from date of purchase or from date of manufacturing (whichever comes first). Wes Industries will replace defective parts only (no labour) from all manufacturing defaults.